

Keywords: *Polymers, Isolast[®],
MCU, PEEK, Tefzel[®], Grafoil[®]*

Retention: *Permanent*

Next Generation Solvent – Materials Compatibility with Polymer Components within Modular Caustic- Side Solvent Extraction Unit (Update Report)

F. F. Fondeur
T. B. Peters
S. D. Fink

September 29 2011

Savannah River National Laboratory
Savannah River Nuclear Solutions
Aiken, SC 29808

Prepared for the U.S. Department of Energy under
contract number DE-AC09-08SR22470.



DISCLAIMER

This work was prepared under an agreement with and funded by the U.S. Government. Neither the U.S. Government or its employees, nor any of its contractors, subcontractors or their employees, makes any express or implied:

1. warranty or assumes any legal liability for the accuracy, completeness, or for the use or results of such use of any information, product, or process disclosed; or
2. representation that such use or results of such use would not infringe privately owned rights; or
3. endorsement or recommendation of any specifically identified commercial product, process, or service.

Any views and opinions of authors expressed in this work do not necessarily state or reflect those of the United States Government, or its contractors, or subcontractors.

Printed in the United States of America

**Prepared for
U.S. Department of Energy**

REVIEWS AND APPROVALS

AUTHORS:

F. F. Fondeur, Separations & Actinide Science Programs

Date

T. B. Peters, Separations & Actinide Science Programs

Date

TECHNICAL REVIEW:

T. E. Skidmore, Materials NDE and Consultation

Date

APPROVAL:

S. D. Fink, Manager
Separations & Actinide Science Programs

Date

S. L. Marra, Manager
Environmental & Chemical Process Technology Research Programs

Date

B.A. Oard, Manager
MCU Life Extension/NGS

Date

EXECUTIVE SUMMARY

The Office of Waste Processing, within the Office of Technology Innovation and Development, is funding the development of an enhanced solvent for deployment at the Savannah River Site for removal of cesium from High Level Waste. The technical effort is collaboration between Oak Ridge National Laboratory (ORNL), Savannah River National Laboratory (SRNL), and Argonne National Laboratory. The first deployment target for the technology is within the Modular Caustic-Side Solvent Extraction Unit (MCU). Deployment of a new chemical within an existing facility requires verification that the chemical components are compatible with the installed equipment. In the instance of a new organic solvent, the primary focus is on compatibility of the solvent with organic polymers used in the facility. This report provides the data from exposing these polymers to the Next Generation Solvent (NGS). The test was conducted over six months.

An assessment of the dimensional stability of polymers present in MCU (i.e., PEEK, Grafoil[®], Tefzel[®] and Isolast[®]) in the modified NGS (where the concentration of the guanidine suppressor and MaxCalix was varied systematically) showed that guanidine (LIX[®]79) selectively affected Tefzel[®] (by an increase in size and lowering its density). The copolymer structure of Tefzel[®] and possibly its porosity allows for the easier diffusion of guanidine. Tefzel[®] is used as the seat material in some of the valves at MCU. Long term exposure to guanidine, may make the valves hard to operate over time due to the seat material (Tefzel[®]) increasing in size. However, since the physical changes of Tefzel[®] in the improved solvent are comparable to the changes in the CSSX baseline solvent, no design changes are needed with respect to the Tefzel[®] seating material. PEEK, Grafoil[®] and Isolast[®] were not affected by guanidine and MaxCalix within six months of exposure. The initial rapid weight gain observed in every polymer is assigned to the finite and limited uptake of Isopar[®] L / Modifier by the polymers probably due to the polymers porosity and rough surfaces. Spectroscopic data on the organic liquid and the polymer surfaces showed no preferential adsorption of any component in the NGS to the polymers and no leachate was observed in the NGS from any of the polymers studied.

TABLE OF CONTENTS

1.0 Introduction 1

2.0 Experimental Procedure 1

3.0 Results and Discussion 5

4.0 Conclusions 8

1.0 Introduction

The Modular Caustic Side Solvent Extraction (MCU) has processed more than two million gallons of supernate waste since 2008.¹ Operations have proven successful thanks to the resilience, reliability, and repeatable performance of the Caustic Side Solvent Extraction (CSSX) process. Since then, researchers at the Oak Ridge National Lab (ORNL), Savannah River National Laboratory (SRNL), and Argonne National Lab have been developing a next generation solvent (or “improved solvent”) and stripping solution that improves both cesium extraction from supernate and stripping from the current solvent. The development also took into consideration lessons learned from the three years of MCU operation.

In 2010, laboratory scale testing of the improved solvent demonstrated excellent achievement of performance goals.^{2,3} Those encouraging results are the bases for larger scale tests currently conducted at SRNL. Performance verification tests examined mass transfer, hydraulic behavior (such as pumping, phase disengagement, phase carryover), and solvent coalescing. The results from the scale-up test will aid in validating the laboratory scale results as a forecaster for final deployment at MCU or the Salt Waste Processing Facility.

To fully implement the improved solvent at the MCU, additional knowledge is needed on the chemical and physical compatibility of the improved solvent with the currently used non-metallic components. These non-metallic components serve a crucial role in sealing and isolating the solvent and solutions from the environment while allowing the flexibility for removing, replacing, and maintaining the different metallic components in MCU. When the existing solvent is replaced with the improved solvent in the MCU process, existing non-metallic components will experience a slightly different chemical environment that could lead to a shorter lifetime (due to leaks or binding caused by swelling) or duty cycle (or absorption of a key component like the extractant MaxCalix^Σ). For instance, amines are known to degrade polymer performance, and the new suppressor in this solvent, a derivative of guanidine (LIX[®] 79), may be more reactive in this regards than the trioctylamine in the current solvent formulation.[¶] To understand if the chemistry change will affect the gaskets, O-rings and other polymer components in MCU, SRNL personnel conducted exposure tests between as received polymers (those currently used at MCU) and the new improved solvent. This report summarizes the findings from this test. This work is a natural expansion of the material compatibility outlined in the original task plan.³ This report is an update from an interim study.⁴

2.0 Experimental Procedure

The solvent systems investigated are shown in Table 1. As shown in Table 1, the new improved solvent has Modifier^f and Isopar[®] L as in the baseline solvent but it also includes MaxCalix and guanidine derivative. The latter two new chemicals may impart more physical changes to the existing polymers used in the MCU process.

The polymers tested – known to be used in MCU and were identified as being the most likely or prominent – are shown in Table 2. With the exception of PEEK (polyether ether ketone) and

^Σ The extractant, MaxCalix, stands for 1,3-*alt*-25,27-Bis(3,7-dimethyloctyloxy)calix[4]arenebenzocrown-6

[¶] The suppressor is a derivitized guanidine, N, N'-cyclohexyl, N''-isotridecyl guanidine.

^f Modifier stands for 1-(2,2,3,3,-Tetrafluoropropoxy)-3-(4-*sec*-butylphenoxy)-2-propanol

Grafoil[®], Table 2 shows most polymers used at MCU have fluoride functional groups. Fluorides and aromatic rings impart polymers with chemical and thermal resistance. Aromatic rings also tend to provide improved radiolytic stability. Despite the fact that the Modifier contains fluorides and alcohol groups that could make the Modifier attractive to the perfluoroelastomers, no detrimental effects have been reported to date. Polymers were not pretreated (e.g., humidity treated as recommended by some ASTM procedures) nor were they cleaned; they were used as received.

Gaskets and sheets were cut in 2 cm x 1 cm rectangles. O-rings were cut into 2 cm long pieces. The cuts were placed in 15 mL of organic liquid contained in Teflon[™] capped 20 mL glass vials. The composition of the organic liquid was varied as shown in Table 3.

Table 1. A list and structure of the components that make up CSSX and the improved solvent.

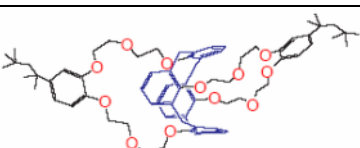
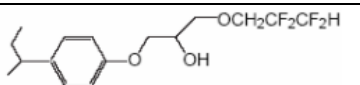
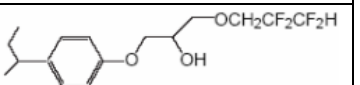

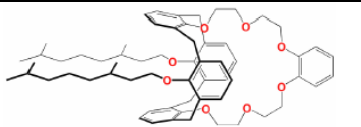
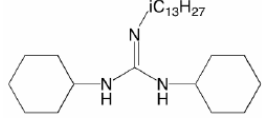
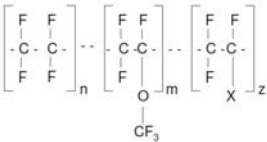
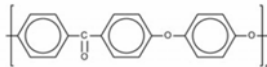
Component	CSSX	Improved Solvent
BOBCalixC6	 7 mM	0 wt %
Modifier	 29 wt %	 21 wt%
TOA	 0.12 wt%	0 wt %
Isopar [®] L	Linear/branched C12 69 wt %	Linear/branched C12 74 wt%
MaxCalix	0 wt %	 50 mM
LIX [®] 79 (Guanidine)	0 wt %	 3 mM

Table 2. A list of the polymers used in MCU selected for testing.

Polymer Name	Chemical Formula of repeat unit	Shape or Form
Tefzel [®] (DuPont) Grades: 200 and 280	$-(\text{CF}_2-\text{CF}(\text{CF}_3))-(\text{CH}_2-\text{CF}_2)-(\text{CF}_2-\text{CF}(\text{CF}_3))-(\text{CH}_2-\text{CH}_2)-$	Gasket
Isolast [®] (carbon filled). Possible PFR 40		O-ring
Grafoil [®] (GrafTech International)	Particles of C ₆ (SP2 hybridized) pressed together	Sheet
Carbon-filled PEEK (30 wt % carbon filled)		Sheet

The test matrix in Table 3 was designed to investigate the effect of temperature, guanidine derivative and MaxCalix on the dimensional stability of the polymers. The split-plot design is selected to facilitate examination of the two temperatures that bound the operating range of MCU (as shown in Figure 1). Therefore some of the conclusions could be influenced by the particulars of those ovens (for example, heating rate or spatial homogeneity of the temperature inside the oven). The baseline tests in Table 3 capture the effect of presence of Isopar[®] L / Modifier on the polymers (at a 74/21 weight ratio). This effect should be similar to the effect of the current CSSX solvent on these polymers (except that the Isopar[®] L / Modifier weight ratio in CSSX is 69/29). Both molecules, Isopar[®] L and Modifier, can cause polymers to swell. Isopar[®] L is a mixture of linear and branched C9-C13 long hydrocarbons that is attracted to hydrophobic materials. The Modifier molecule has polar and non-polar functional groups that are attracted to hydrophilic materials. We expect the presence of both Isopar[®] L / Modifier to interact (causing swelling) with porous and flexible polymers (such as thermoplastics and slightly cross-linked thermosets). The question to be answered is “does the presence of guanidine derivative and MaxCalix in conjunction with heat (temperature) cause further dimensional instability in these polymers beyond the effect of Isopar[®] L / Modifier alone?”

Since extraction and stripping are conducted at 23 ± 3 °C and 33 ± 3 °C respectively, the tests were at conducted 21 and 36 °C. The 21 °C temperature (instead of 20 °C) was the lowest temperature we could achieve with the oven.

In the experimental design, the concentrations of MaxCalix were varied to exceed the expected operating range in the facility (the concentration was varied from 3 mM to 10 mM)[this is not true for guanidine because you varied from 3 mM to 10 mM, which is the conc. in NGS] but to maintain their relative masses to the total solvent in the same rough order of magnitude.

Given that the ratio of Isopar[®] L / Modifier is higher in our test than in the CSSX solvent, this composition is still within the operating range of MCU since extra Isopar[®] L is added to the CSSX solvent when trimming is conducted to account for Isopar[®] L evaporation. No degradation of the polymers has been reported due to the excess additions of Isopar[®] L that leads to higher Isopar[®] L to Modifier ratio.

Table 3. The chemical composition of the organic liquid used to investigate the effect of MaxCalix and guanidine.

Whole plots	Temperature (°C)	MaxCalix (mM)	Guanidine (mM)	Isopar [®] L / Modifier
1	21	70	3	Remainder*
1	21	50	10	Remainder *
2	36	70	10	Remainder *
2	36	50	3	Remainder *
3	21	70	10	Remainder *
3	21	50	3	Remainder *
4	36	50	10	Remainder *
4	36	70	3	Remainder *
5	21	0	0	100% *
5 [#]	36	0	0	100% *

* Isopar[®] L to Modifier weight ratio is 74/21 (improved solvent)

- Some baseline tests were conducted with CSSX solvent

The polymer samples were exposed to 15 mL of the organic liquid listed in Table 3 for six months. During the exposure some polymers from Table 3 were analyzed periodically to determine the kinetics (speed) of swelling (or shrinkage) or possible reaction that may occur between these polymers and the solvent. The sampling frequency consisted of examining some polymers every 24 hours for the first 120 hours of exposure and then the sampling frequency was reduced to sampling these polymers twice every week. After five months of exposure, all polymers in Table 3 were analyzed to determine the effect of guanidine, MaxCalix and temperature (as well as their two-ways cross products) on the polymers listed in Table 2.

In a separate set of experiments, similar polymer samples were exposed to the baseline solvent. Since a full-factorial experimental design was not used, we will compare the absolute changes for the improved solvent to those observed for the baseline solvent under similar experimental conditions. Property changes that are similar to or less than observed with the baseline solvent should provide a confidence for deployment of the new solvent.

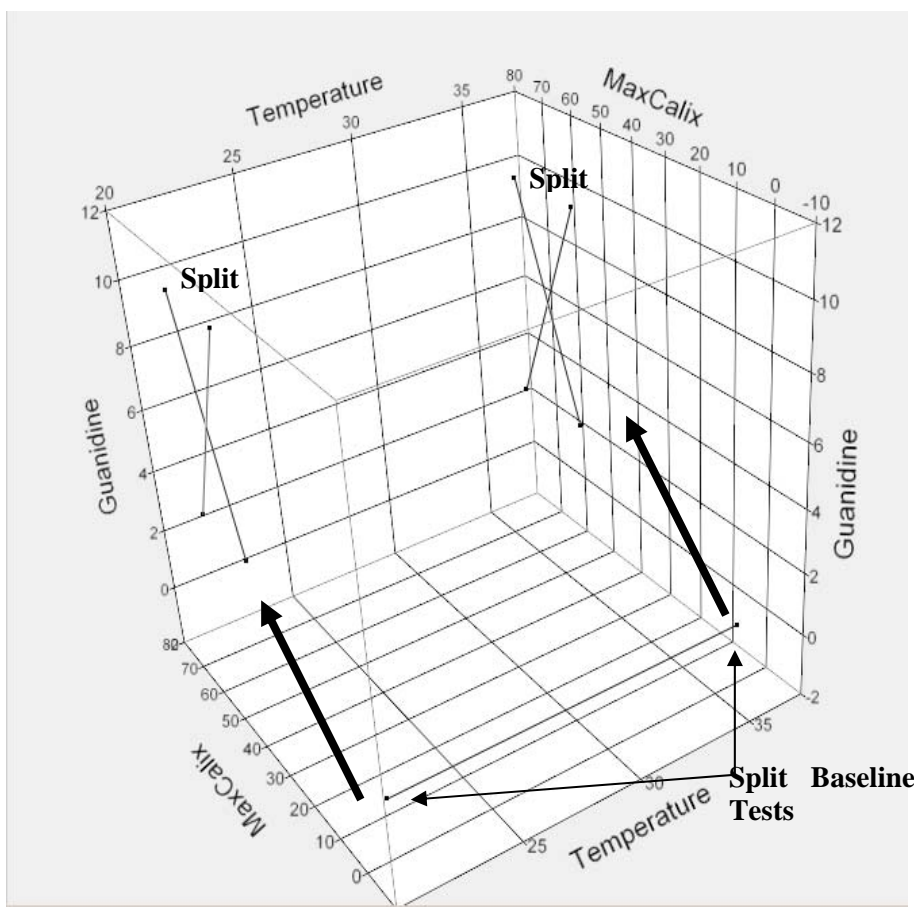


Figure 1. Visual picture of the design matrix listed in Table 3. Two ovens were used in the matrix. Oven variance is not captured in this test.

The polymers will be evaluated in three areas:

1. dimensional stability (e.g., thickness, volume, density, etc.),
2. chemical stability (e.g., absorption, leaching and chemical reactions), and

Of these areas, this report presents only dimensional data where applicable.

3.0 Results and Discussion

3.1 Comparison between the baseline tests of the modified NGS (Isopar[®] L / Modifier) and CSSX

The weight, thickness and density data for PEEK, Grafoil[®] and Tefzel[®] is presented in Figures A1 to A9 in Appendix A. Figures A1 to A9 shows appreciable variability at the two temperatures (21 and 36 °C). In general, when the polymer density decreased relative to the as-received polymer it was most likely due to dimensional increase exceeding weight gain. It is also possible that the polymers lost (adsorbed or absorbed) water when exposed to the organic fluids thereby

affecting the net mass gained or lost. The data indicate that Isolast[®] increased in thickness but the change is consistent with the changes seen when Isolast[®] is placed in CSSX (see Fig. 4D). Based on the chemical structure of Isolast[®], Isolast[®] is the most chemically resistant of the polymers studied here; therefore, we do not expect any effect of these solvents on Isolast[®].

When trying to evaluate if the baseline test results for the improved solvent were equivalent to the results in CSSX solvent, in general due to the variance in the measurements, both solvents had nearly equal impact on the polymers. For example, as shown in Figure A2, the variation in PEEK thickness in CSSX versus PEEK thickness in baseline NGS (with no MaxCalix or Lix[®]79) at 21 °C is roughly 0.08 mm which is within the variation of the measurement. A similar conclusion was reached in the analysis of Grafoil[®] and Tefzel[®] where their thicknesses and weight change in baseline NGS, although above the measurement noise, were within the changes observed when these materials were immersed in CSSX.

MCU will not replace the polymers when the facility transitions from the CSSX solvent to the improved solvent; however, we foresee no additional effects on the polymers when MCU changes to the improved solvent.

3.2 *t*-test of the thickness and weight of PEEK, Grafoil[®], Tefzel[®], and Isolast[®] before and after exposure to the solvents

A t-test (for paired observation) of the thickness and weight of the individual polymers (i.e., PEEK, Grafoil[®], Tefzel[®], and Isolast[®]) is shown in table format in Appendix B. Since the physical dimensions of the pieces of polymers (same pieces) were tracked before and after exposure, a paired t-test analysis will detect the effect of the treatment (i.e., solvent exposure from Table 3). The tables show that the “as received” polymers typically gained weight and lost size (thickness) after 6 months in the solvents listed in Table 3 (with the exception of Grafoil[®] and Tefzel[®] (see Fig. 3D and 4D) which got thicker – see Figure B1 for Grafoil[®]. Any probability less than 0.05 (for the two tails curve) is evidence of a significant effect. Such a significant effect was seen in most samples. (The thickness of Isolast[®] and weight of PEEK showed no significant change, which is also seen in the baseline solvent.) These physical changes are believed to be due primarily to the components Isopar[®] L and Modifier shown to cause similar effect for samples exposed to the CSSX solvent (refer to Appendix A).

3.3 *Guanidine and MaxCalix effect on PEEK, Grafoil[®], Tefzel[®] and Isolast[®]*

To determine if guanidine and MaxCalix affected the dimensional stability of the polymers, least square fitting of the thickness, weight, and density was conducted. Appendix C shows Figures 1C to 4C presenting the least square fitting done with all the possible variables (i.e., guanidine, MaxCalix, temperature, and their two-ways multiplication).

Visual inspection of Figures 1C to 4C clearly shows that, with the exception of Tefzel[®], the presence of guanidine and MaxCalix had no impact on the dimensional stability of these polymers. The least square fitting (Jump Software version 8.2) could not fit any of the possible variables to the weight, thickness and density data (i.e., the data grouped in a “shot gun” formation).

In the case of Tefzel[®], the least square fitting was able to find the variable that can fit the systematic variation in thickness and density of Tefzel[®]. That variable was guanidine and at

36 °C the effect of guanidine is more significant. In fact, during the measurements personnel reported the Tefzel[®] sample “bended and twisted” easily (with no memory of its previous shape). Spectroscopy data (still pending [Are you planning to issue this report and revise when the data becomes available? When do you expect to receive the data?])(Verify with SDF issue within a month) will provide more insight into the chemistry changes. The ethylene portion of the ETFE random copolymer is probably being affected by the solvent.

The question is “are the changes experienced by Tefzel[®] in 74/21 Isopar[®] L/Modifier solvent containing guanidine and MaxCalix solvent comparable to the changes Tefzel[®] experienced in CSSX baseline solvent?” Appendix E shows the side by side data comparing Tefzel[®] weight, thickness, and density change in both solvents. A review of Figures 1E and 2E clearly shows that the physical changes experienced by Tefzel[®] in the improved solvent are within and are comparable to the changes that Tefzel[®] experienced in baseline CSSX solvent. In other words, the changes are within the tolerance since Tefzel[®] is being currently used at MCU with no reports of leaks or degradation. Tefzel[®] is used as the seat material in some of the valves at MCU.⁵ Long term exposure to guanidine, may make the valves hard to operate over time due to the seat material (Tefzel[®]) increasing in size. The tolerance of the valve design to swelling, softening, or plasticization of the Tefzel[®] seat is unknown. In many cases, the net effect of slight swelling may be offset by softening, or vice versa, for at least some period of time. Therefore, additional studies should examine the long term effects of guanidine on Tefzel[®]. Testing performance of exposed components in an actual valve is prudent and may be required to determine failure thresholds.

3.4 *Bi-layer Effect (NGS-Boric acid and NGS-Salt Solution) on Tefzel[®], Grafoil[®], and PEEK*

Personnel placed pieces of polymers in bi-layer solution (NGS on the top and aqueous solution in the bottom). This test was to determine if the presence of two liquids, NGS and an aqueous solution (boric acid or salt simulant) leads to synergistic effects (for example more rapid polymer softening, thickening or faster weight gain).

The polymers experienced no physical changes beyond those observed when the polymers were immersed in pure solution (boric acid or NGS). No physical change (thickness) was observed on the of PEEK, Tefzel, Isolast or Grafoil[®] at the aqueous-NGS interface.

3.5 *Kinetics of PEEK, Grafoil[®], Tefze[®]l and Isolast[®] in the presence of Guanidine and MaxCalix*

Appendix D shows the parameters weight, thickness, and density of PEEK, Grafoil[®], Tefzel[®] and Isolast[®] in Figures 1D to 5D. Figures 1D to 4D clearly show no additional change (i.e., absence of significant uptake or leaching) when the polymers were evaluated from 24 hours to 120 hours of exposure. The variation in all data was random with time and was within the noise of the system (i.e., variances in treatment, measurement and handling). The initial uptake of solvent discussed previously (assigned to the presence of Isopar[®] L / Modifier) occurred much faster than 24 hours.

In the case of Tefzel[®], the additional effect of guanidine (discussed in the previous section) must have occurred faster than the initial 24 hours of exposure. Since the whole sample softened this implies that the improved solvent permeated through the sample (not just to the surface). All physical measurements (thickness, weight and density) reached steady state 1.5 months after the start of the test and remained so for the rest of the test (6 months).

4.0 Conclusions

An assessment of the dimensional stability of PEEK, Grafoil[®], Tefzel[®] and Isolast[®] in modified NGS (where the concentration of guanidine derivative and MaxCalix was varied systematically) showed that the guanidine compound (LIX[®] 79) selectively affected Tefzel[®] (by an increase in size and lowering its density). The random copolymer structure, relative crystallinity, and possible porosity of Tefzel[®] allows for the easier diffusion of the guanidine species. PEEK, Grafoil[®] and Isolast[®] were not affected by the guanidine compound and MaxCalix within 6 months of exposure. The initial rapid weight gain observed in every polymer is assigned to the finite and limited uptake of Isopar[®] L / Modifier by the polymers probably due to the polymers porosity and rough surfaces. Spectroscopic data on the organic liquid and the polymer surfaces are still pending.

The testing shows no major concerns for compatibility over the duration of these tests but does indicate that longer duration exposure studies are warranted, especially for Tefzel[®]. However, the physical changes experienced by Tefzel[®] in the improved solvent were comparable to the physical changes obtained when Tefzel[®] is placed in CSSX baseline solvent. Therefore, there is no effect of the improved solvent beyond those observed in CSSX baseline solvent. Given that for six months Tefzel[®] did not plasticized to the point of losing its physical shape, there is low risk that the current Tefzel[®] components at MCU will not perform as designed. The sensitivity of actual components to such changes is not known, but some degree of swelling and property changes is usually tolerable. For example, for static O-ring applications of standard design, a volume swell of up to 30% may be tolerable. Dynamic applications are generally less tolerant of such changes. For critical components, it is recommended that selected Tefzel[®] valves be exposed to bounding conditions and placed into an actual component to evaluate performance. This might give the facility advance notice of problems, or may show that expected service periods can be achieved. A more conclusive examination of the mechanical and chemical changes will be needed to make a definitive assessment for selected samples.

Appendix A: Comparison of the weight, thickness and density of PEEK, Grafoil[®] and Tefzel[®] polymers for baseline CSSX solvent and 74/21 Isopar[®] L / Modifier weight ratio only.

The following figures examine only the baseline CSSX solvent and the samples with altered Isopar[®] L / Modifier weight ratio (74/21). No guanidine or MaxCalix containing samples are shown. The “as received” data was obtained at room temperature for comparison.

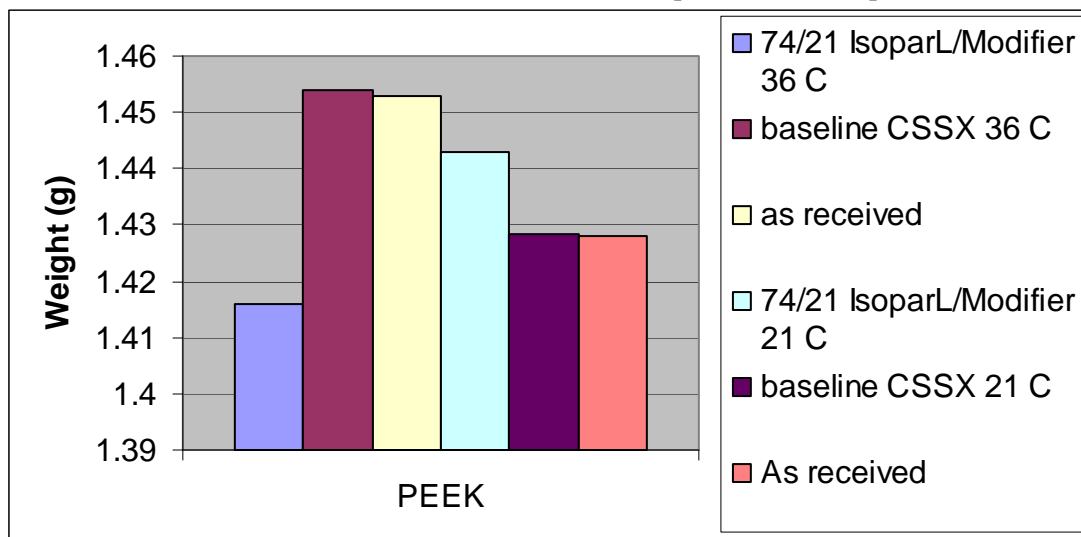


Figure A1. A weight comparison between the baseline CSSX test and the samples with altered Isopar[®] L / Modifier weight ratio (74/21).

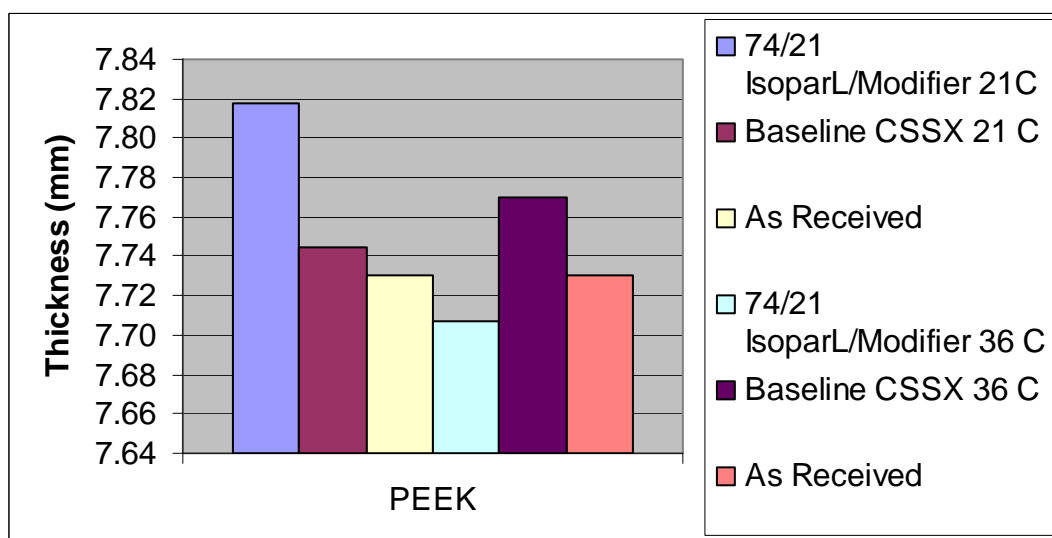


Figure A2. A thickness comparison between the baseline CSSX test and the samples with altered Isopar[®] L / Modifier weight ratio (74/21).

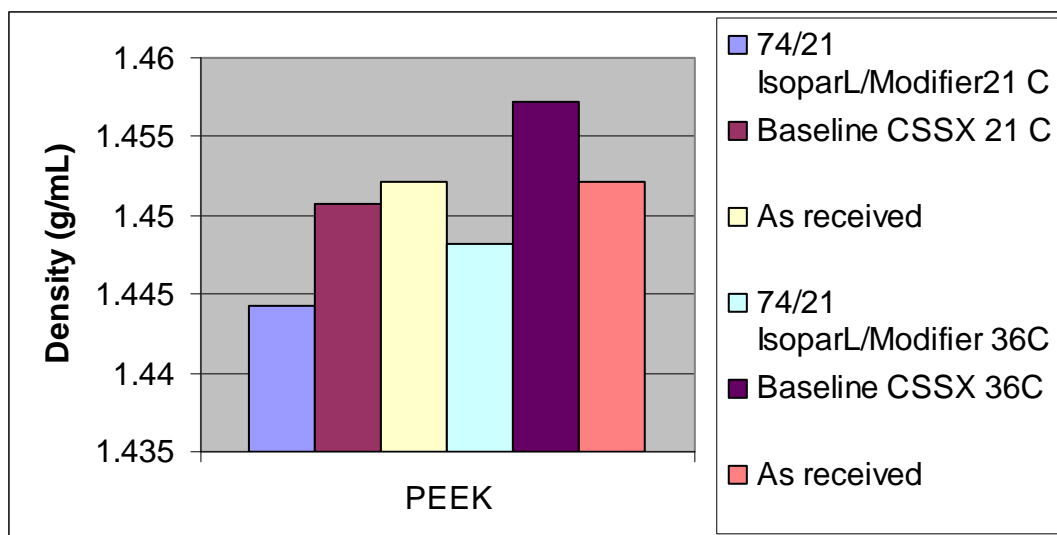


Figure A3. A density comparison between the baseline CSSX test and the samples with altered Isopar® L / Modifier weight ratio (74/21).

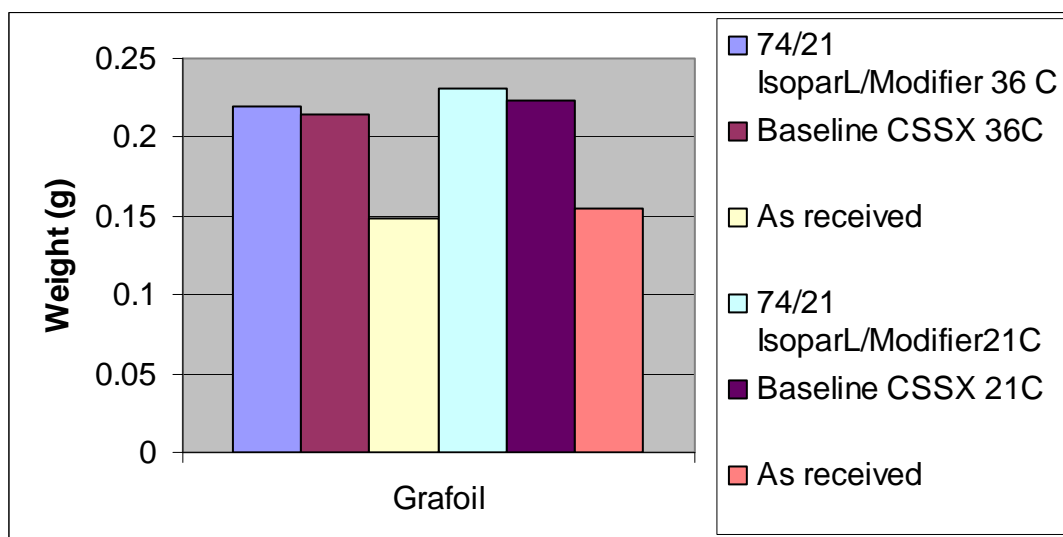


Figure A4. A weight comparison between the baseline CSSX test and the samples with altered Isopar® L / Modifier weight ratio (74/21).

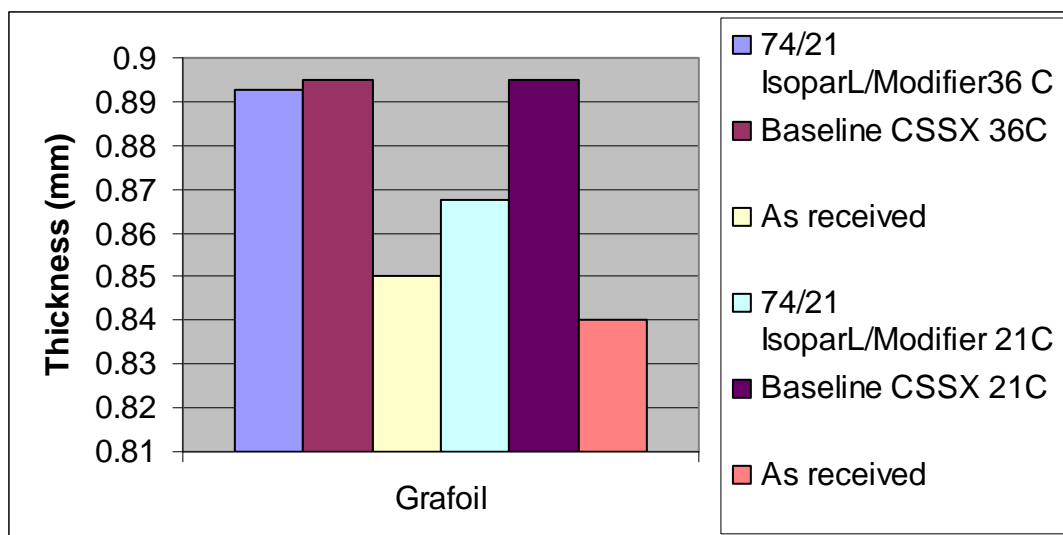


Figure A5. A thickness comparison between the baseline CSSX test and the samples with altered Isopar® L / Modifier weight ratio (74/21).

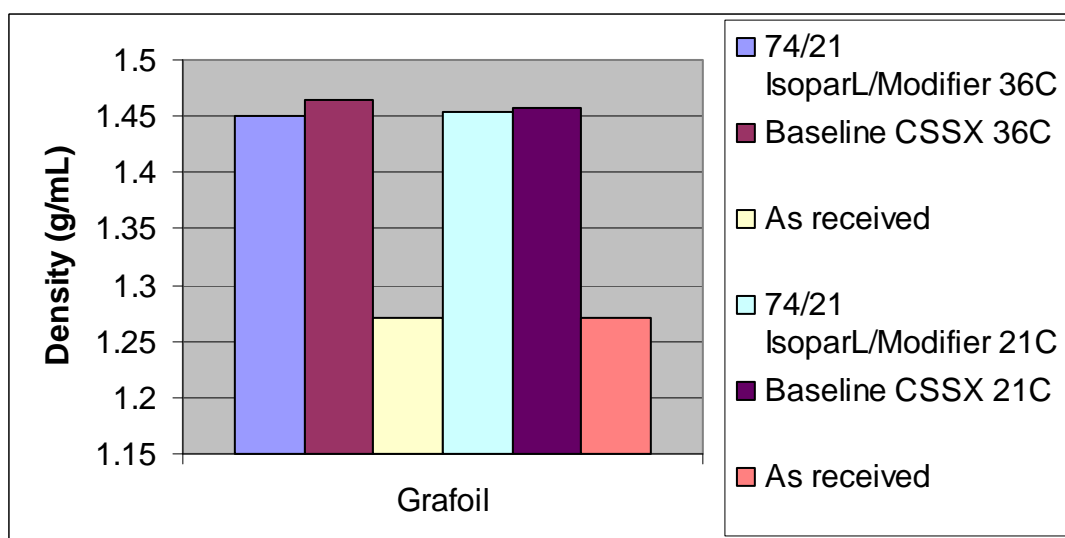


Figure A6. A density comparison between the baseline CSSX test and the samples with altered Isopar® L / Modifier weight ratio (74/21).

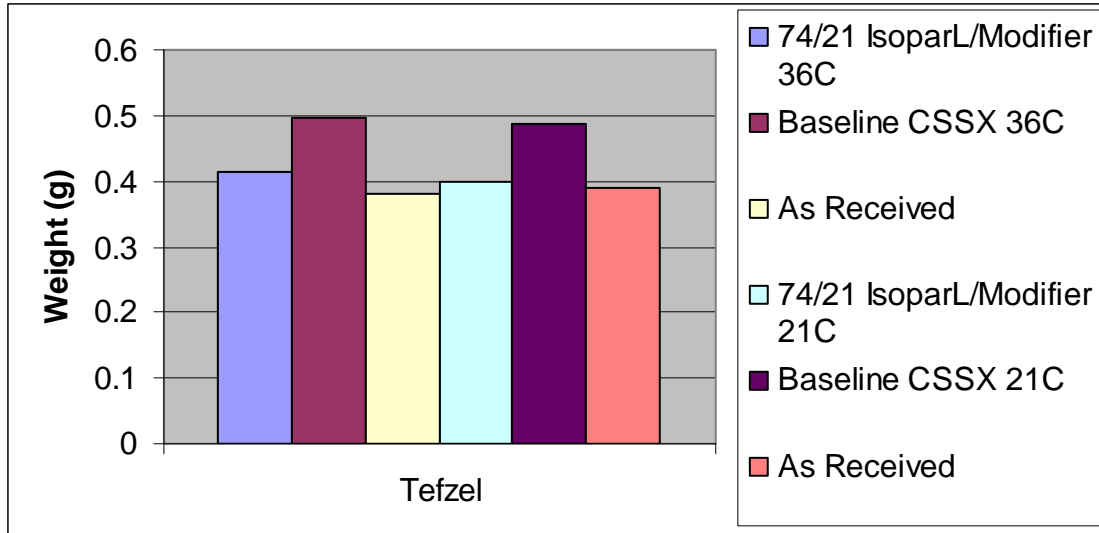


Figure A7. A weight comparison between the baseline CSSX test and the samples with altered Isopar® L / Modifier weight ratio (74/21).

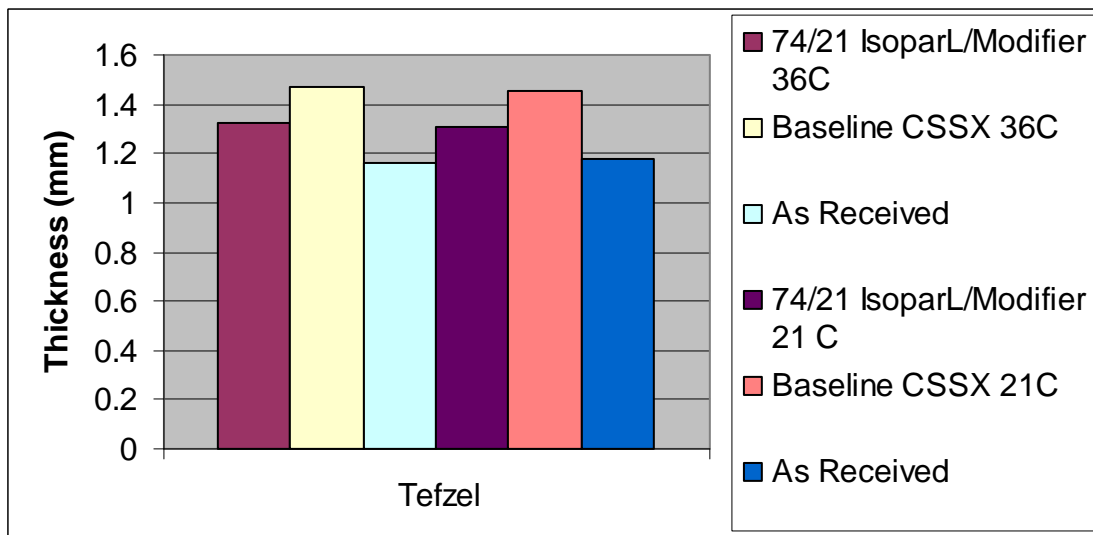


Figure A8. A thickness comparison between the baseline CSSX test and the samples with altered Isopar® L / Modifier weight ratio (74/21).

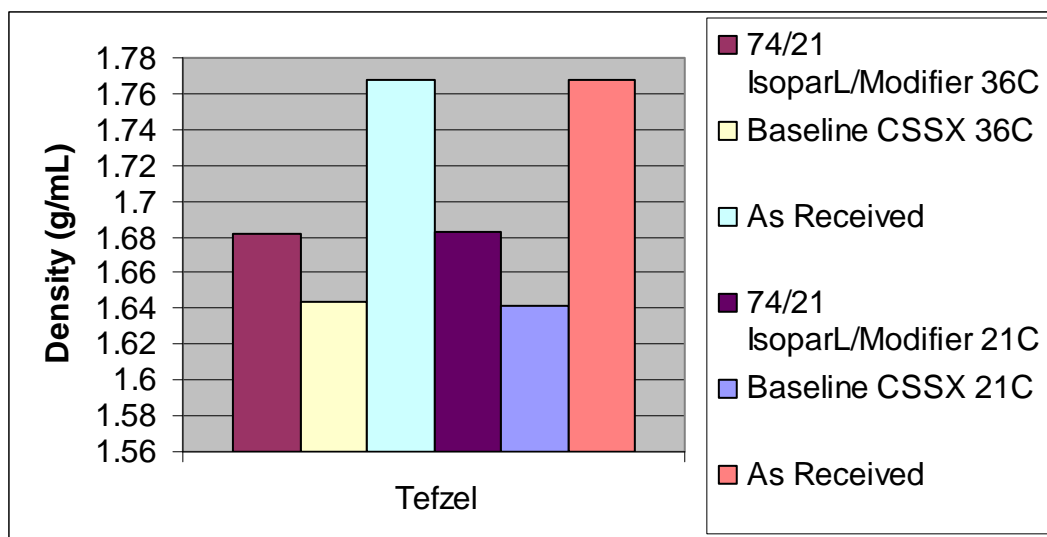


Figure A9. A density comparison between the baseline CSSX test and the samples with altered Isopar® L / Modifier weight ratio (74/21).

Appendix B: t-test of the weight (g) and thickness (mm) of PEEK, Tefzel[®], Grafoil[®], and Isolast[®] before and after exposure to the modified solvents (Table 3). [Which Max, guanidine, and temperature cases do these t-tests represent?]

This data shows the effect of wetting the polymer with solvent containing Isopar[®] L, Modifier, guanidine and MaxCalix (with the composition listed in Table 3) relative to the “as received” polymer (dry).

Table 1B. t-Test: Paired Two Sample for Means thickness

PEEK

	<i>Before</i>	<i>After</i>
Mean	7.74E+00	7.73E+00
Variance	2.65E-02	2.38E-02
Observations	2.40E+01	2.40E+01
Pearson Correlation	9.98E-01	
Hypothesized Mean Difference	0.00E+00	
Df	2.30E+01	
t Stat	3.37E+00	
P(T<=t) one-tail	1.32E-03	
t Critical one-tail	1.71E+00	
P(T<=t) two-tail	2.64E-03	
t Critical two-tail	2.07E+00	

Table 2B. t-Test: Paired Two Sample for Means Weight

PEEK

	<i>Before</i>	<i>After</i>
Mean	1.42E+00	1.42E+00
Variance	3.69E-03	3.91E-03
Observations	2.40E+01	2.40E+01
Pearson Correlation	1.00E+00	
Hypothesized Mean Difference	0.00E+00	
Df	2.30E+01	
t Stat	1.73E+00	
P(T<=t) one-tail	4.83E-02	
t Critical one-tail	1.71E+00	
P(T<=t) two-tail	9.65E-02	
t Critical two-tail	2.07E+00	

Table 3B. t-Test: Paired Two Sample for Means Weight
Grafoil

	<i>Before</i>	<i>After</i>
Mean	1.59E-01	2.24E-01
Variance	5.33E-05	1.86E-04
Observations	2.40E+01	2.40E+01
Pearson Correlation	6.51E-01	
Hypothesized Mean Difference	0.00E+00	
Df	2.30E+01	
t Stat	3.05E+01	
P(T<=t) one-tail	2.12E-20	
t Critical one-tail	1.71E+00	
P(T<=t) two-tail	4.24E-20	
t Critical two-tail	2.07E+00	

Table 4B. t-Test: Paired Two Sample for Means thickness
Grafoil

	<i>Before</i>	<i>After</i>
Mean	8.68E-01	8.93E-01
Variance	4.61E-04	3.21E-04
Observations	2.40E+01	2.40E+01
Pearson Correlation	2.44E-01	
Hypothesized Mean Difference	0.00E+00	
Df	2.30E+01	
t Stat	5.06E+00	
P(T<=t) one-tail	1.99E-05	
t Critical one-tail	1.71E+00	
P(T<=t) two-tail	3.97E-05	
t Critical two-tail	2.07E+00	

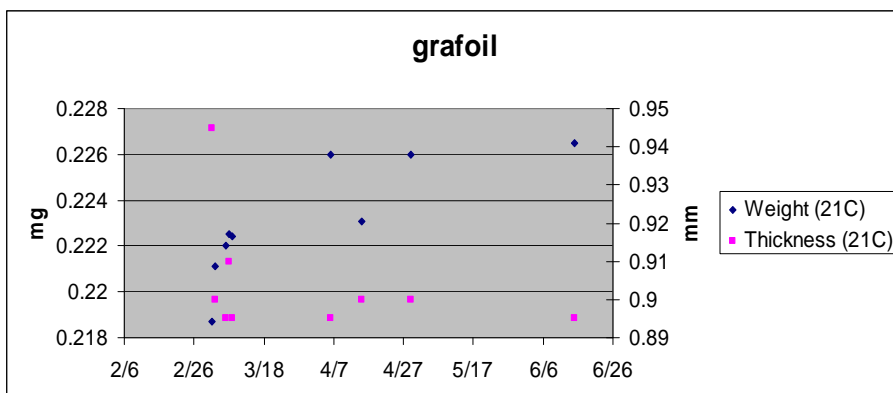


Figure B1. This figure shows that after one month of exposure to NGS, Grafoil[®] sorbed solvent and that weight gain reached steady state approximately two months after. The thickness of the sample remained constant throughout the test.

Table 5B. t-Test: Paired Two Sample for Means weight

TEFZEL

	<i>Before</i>	<i>After</i>
Mean	3.44E-01	4.30E-01
Variance	1.15E-03	2.04E-03
Observations	2.30E+01	2.30E+01
Pearson Correlation	9.80E-01	
Hypothesized Mean Difference	0.00E+00	
Df	2.20E+01	
t Stat	3.01E+01	
P(T<=t) one-tail	1.15E-19	
t Critical one-tail	1.72E+00	
P(T<=t) two-tail	2.30E-19	
t Critical two-tail	2.07E+00	

Table 6B. t-Test: Paired Two Sample for Means thickness

TEFZEL

	<i>Before</i>	<i>After</i>
Mean	1.15E+00	1.40E+00
Variance	4.32E-04	2.67E-03
Observations	2.30E+01	2.30E+01
Pearson Correlation	5.18E-01	
Hypothesized Mean Difference	0.00E+00	
Df	2.20E+01	
t Stat	2.65E+01	
P(T<=t) one-tail	1.67E-18	
t Critical one-tail	1.72E+00	
P(T<=t) two-tail	3.34E-18	
t Critical two-tail	2.07E+00	

Table 7B. t-Test: Paired Two Sample for Means weight
ISOLAST

	<i>Before</i>	<i>After</i>
Mean	9.34E-01	9.35E-01
Variance	5.60E-03	5.64E-03
Observations	2.40E+01	2.40E+01
Pearson Correlation	9.99E-01	
Hypothesized Mean Difference	0.00E+00	
Df	2.30E+01	
t Stat	2.79E+00	
P(T<=t) one-tail	5.22E-03	
t Critical one-tail	1.71E+00	
P(T<=t) two-tail	1.04E-02	
t Critical two-tail	2.07E+00	

Table 8B. t-Test: Paired Two Sample for Means thickness
ISOLAST

	<i>Before</i>	<i>After</i>
Mean	5.01E+00	4.84E+00
Variance	5.72E-03	8.53E-01
Observations	2.40E+01	2.40E+01
Pearson Correlation	-5.64E-02	
Hypothesized Mean Difference	0.00E+00	
Df	2.30E+01	
t Stat	9.27E-01	
P(T<=t) one-tail	1.82E-01	
t Critical one-tail	1.71E+00	
P(T<=t) two-tail	3.64E-01	
t Critical two-tail	2.07E+00	

Appendix C: Least Square Fitting of Weight, Thickness and Density of Tefzel®, Grafoil®, Isolast®, and PEEK

All weights are given in g, all thicknesses are given in mm, and the densities are reported in g/mL.

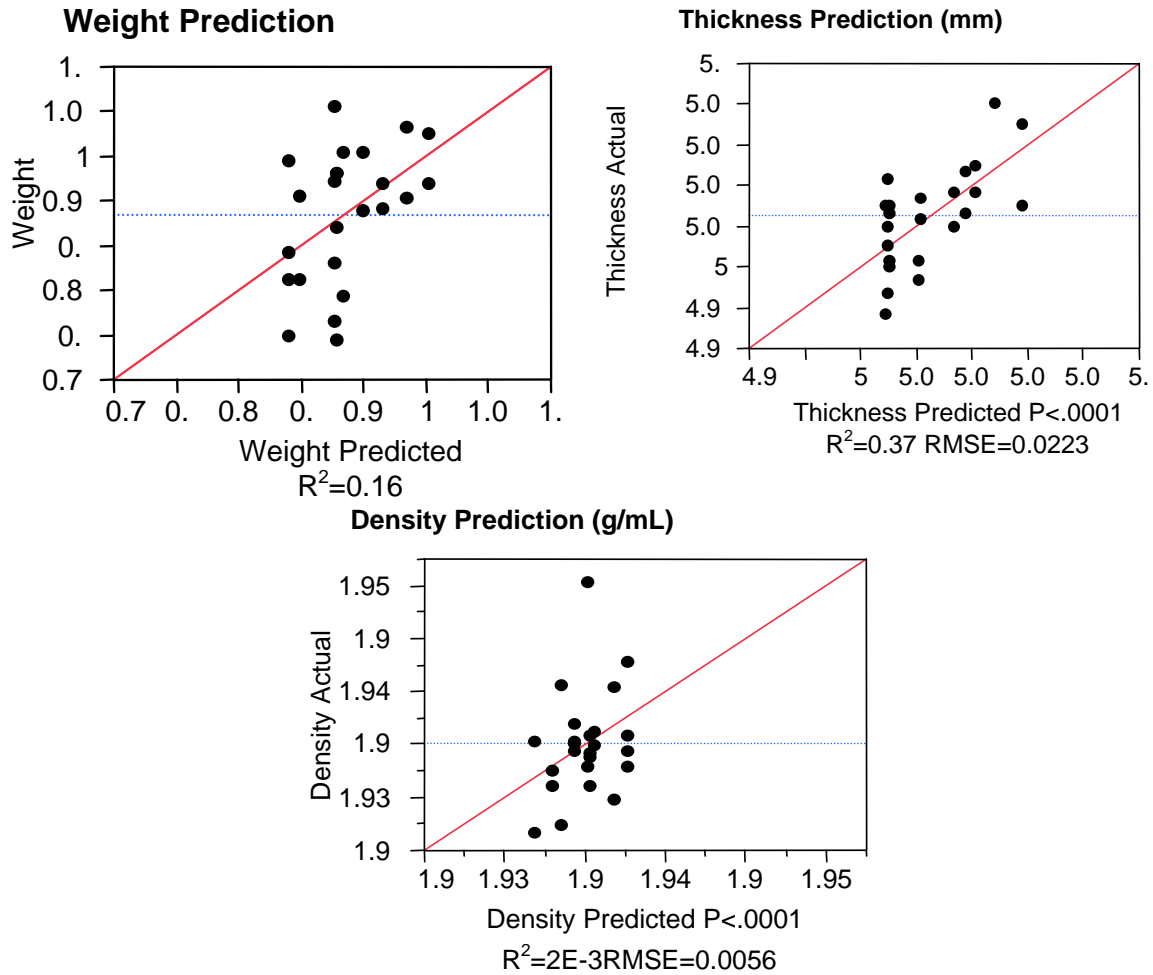


Figure 1C. Least square fitting of the physical dimensions of Isolast®.

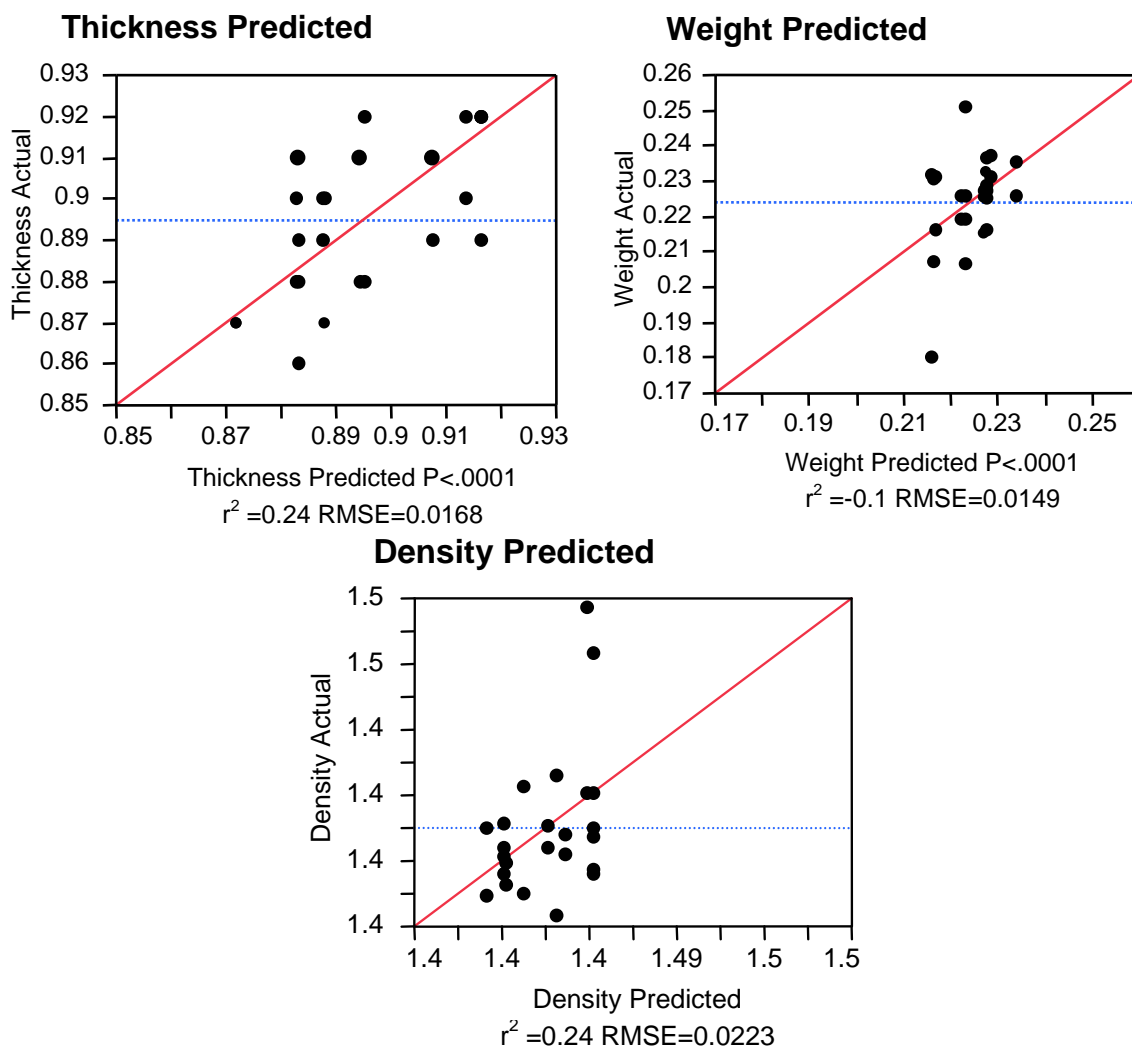


Figure 2C. Least square fitting of the physical dimension of Grafoil®.

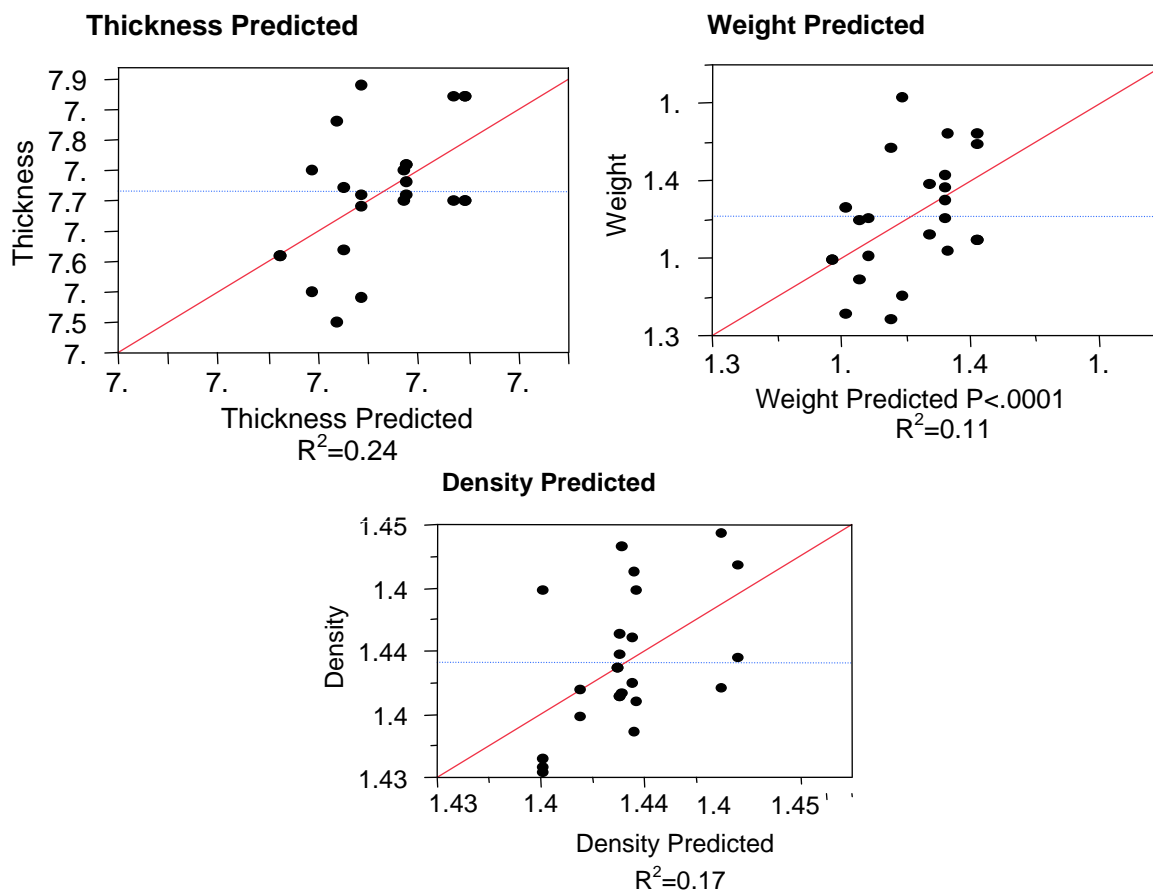


Figure 3C. Least square fitting of the physical dimensions of PEEK.

Table 1C. Fixed Effect Tests for PEEK thickness after 6 months exposure to modified NGS. The cross term temperature x [MaxCalix] appears to affect (increase) the PEEK thickness.

Source	# parm	DF	DF Den	F Ratio	Prob > F
Temperature(21,36)	1	1	0.744	6.2134	0.3062
MaxCalix(50,70)	1	1	6.58	0.0398	0.8480
Guanidine(3,10)	1	1	13.67	1.8384	0.1971
Temperature*MaxCalix	1	1	16.95	5.1931	0.0359*
Temperature*Guanidine	1	1	16.87	1.9076	0.1853
MaxCalix*Guanidine	1	1	1.945	0.6028	0.5207

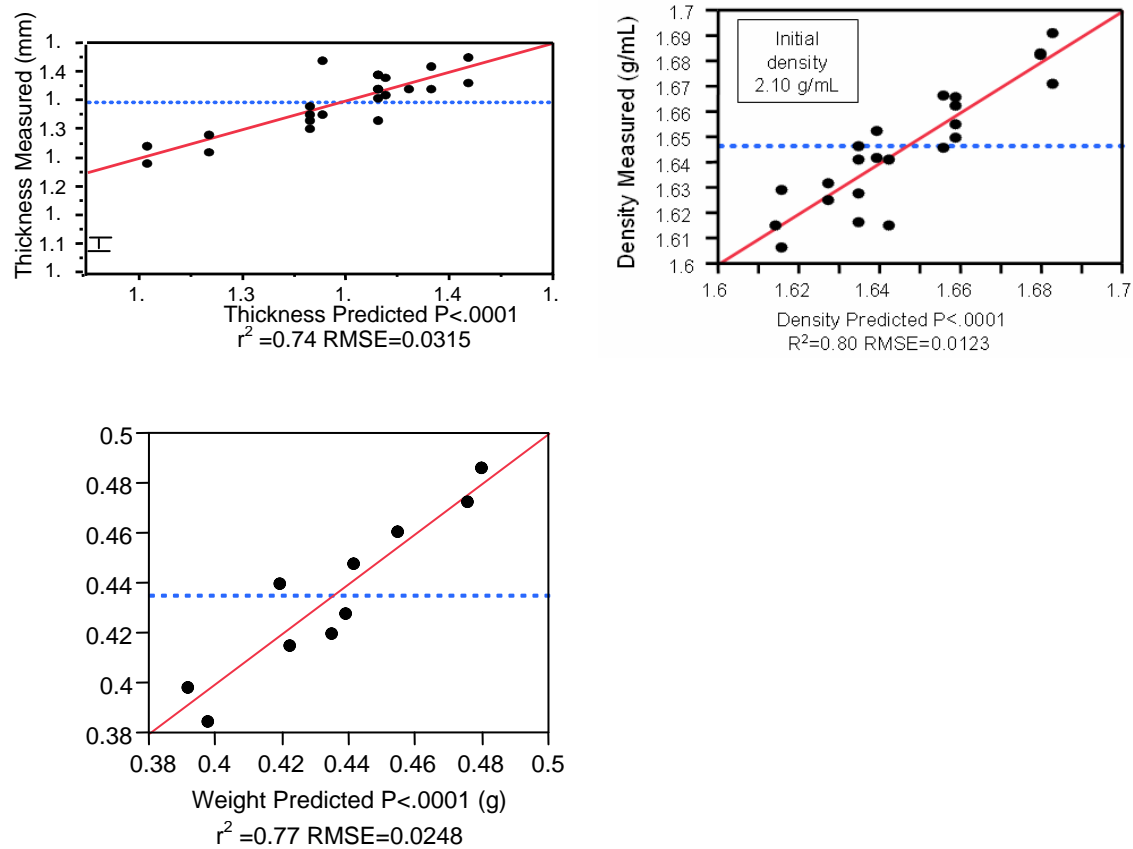


Figure 4C. Least square fitting of the physical dimensions of Tefzel®.

Appendix D: The physical dimensions of PEEK, Tefzel[®], Grafoil[®] and Isolast[®] as a function of time (hours) in the presence of Guanidine and MaxCalix. All weights are given in grams, thicknesses given in millimeters, and density given in g/mL.

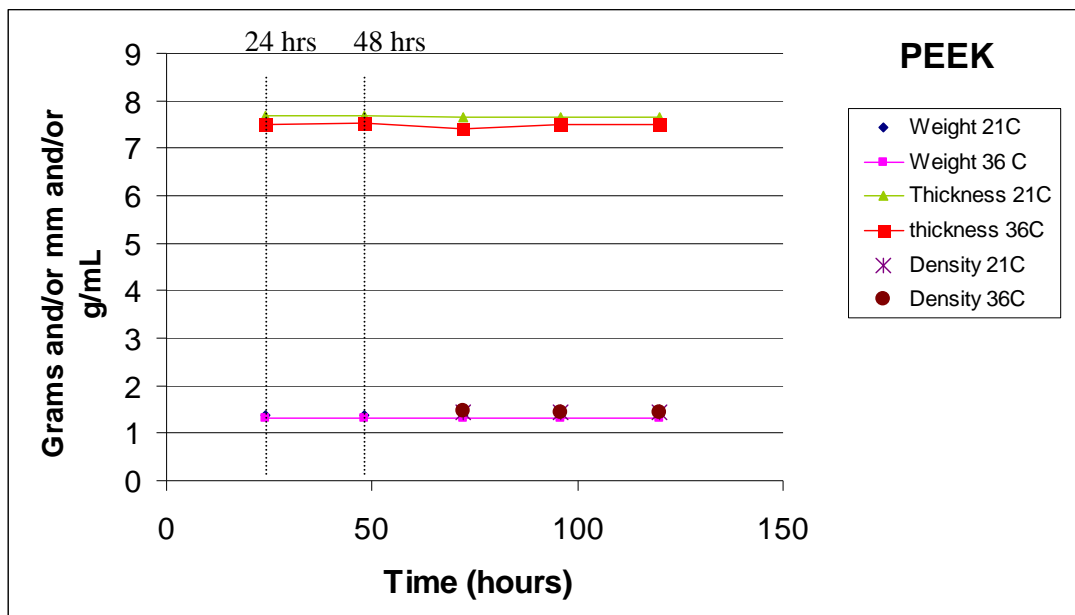


Figure 1D. The physical dimensions of PEEK as a function of time in the presence of guanidine and MaxCalix. [At what Max and guanidine concentrations was this measured?]

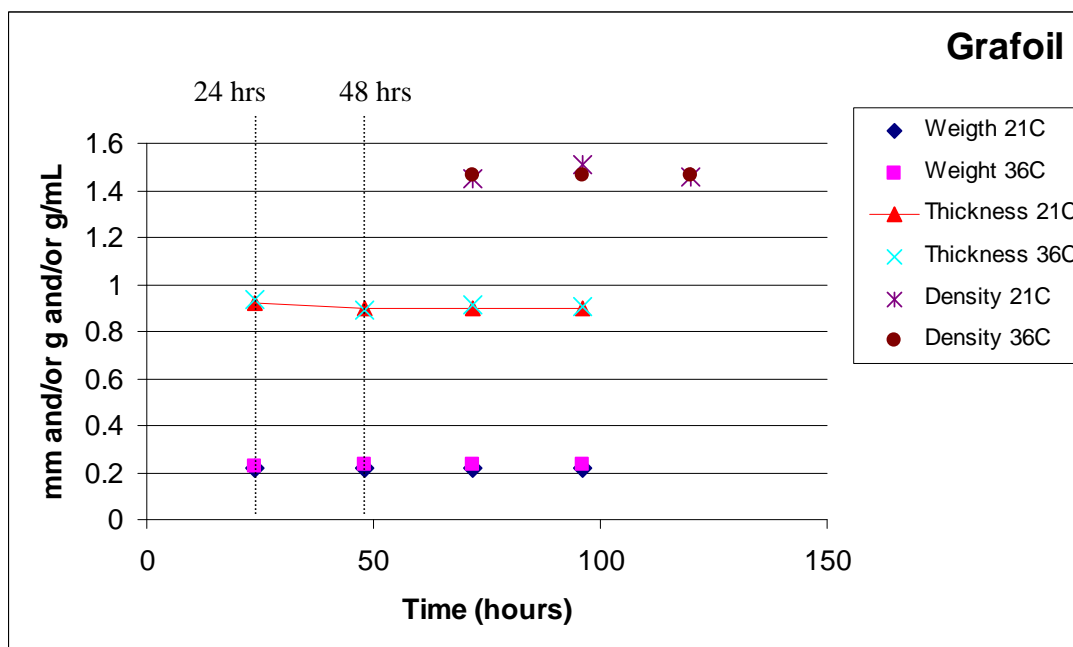


Figure 2D. The physical dimensions of Grafoil[®] as a function of time in the presence of guanidine and MaxCalix. At what Max and guanidine concentrations were these measured?

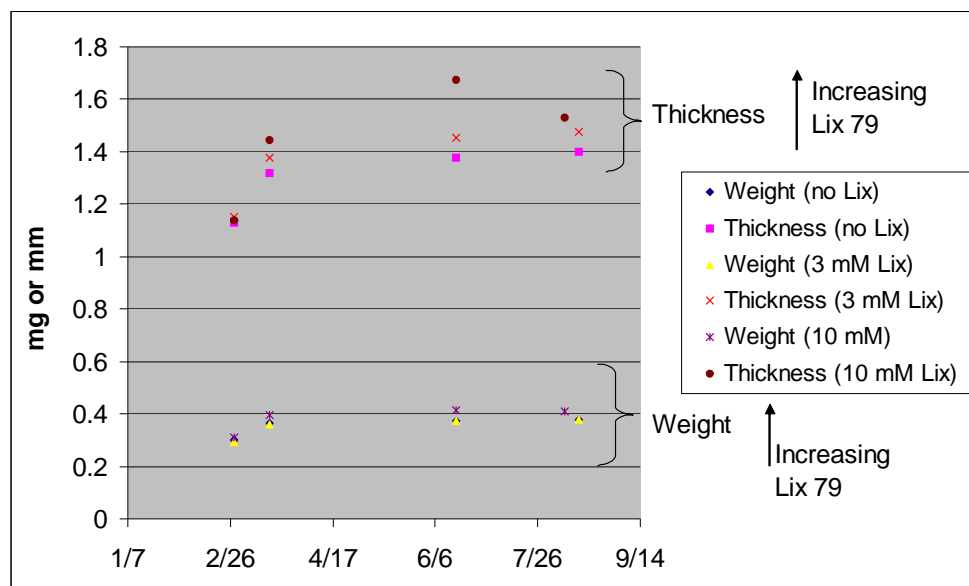


Figure 3D. The physical dimensions of Tefzel® as a function of time in the presence of guanidine (MaxCalix composition remained at 70 mM) at 21 °C.

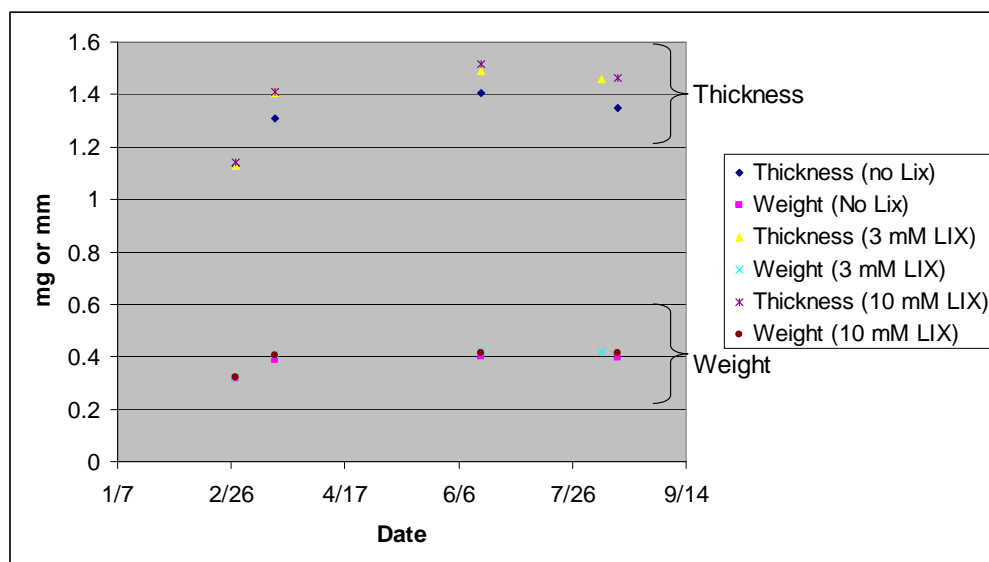


Figure 4D. The physical dimensions of Tefzel® as a function of time (date) in the presence of guanidine (MaxCalix composition remained at 70 mM) at 36 °C.

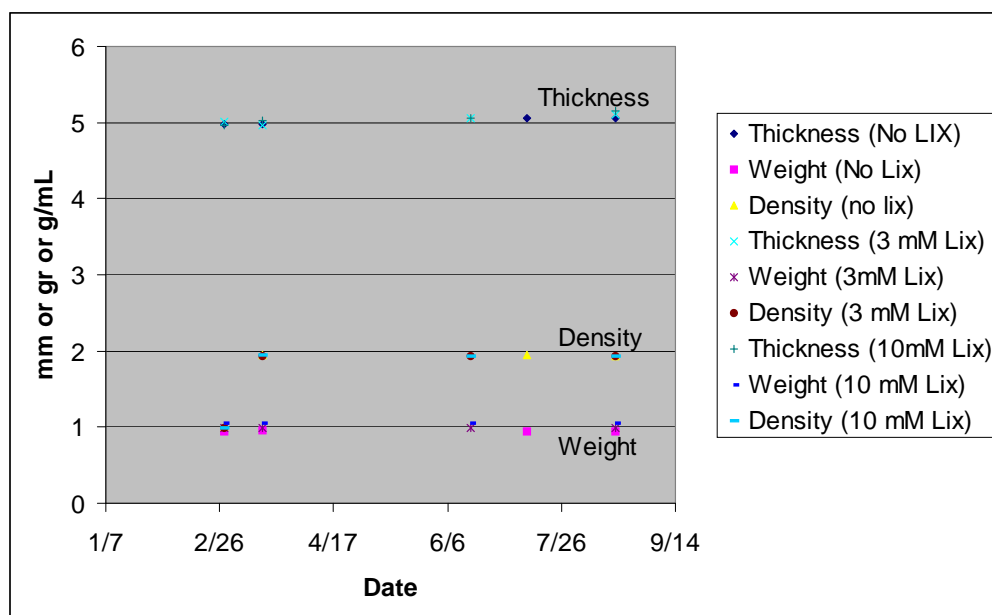


Figure 5D. The physical dimensions of Isolast[®] as a function of time in the presence of guanidine (MaxCalix composition set at 70 mM).

Appendix E: A comparison of the physical dimensions changes of Tefzel® in 74/21 IsoparL/Modifier solvent versus the changes seen in CSSX baseline solvent.

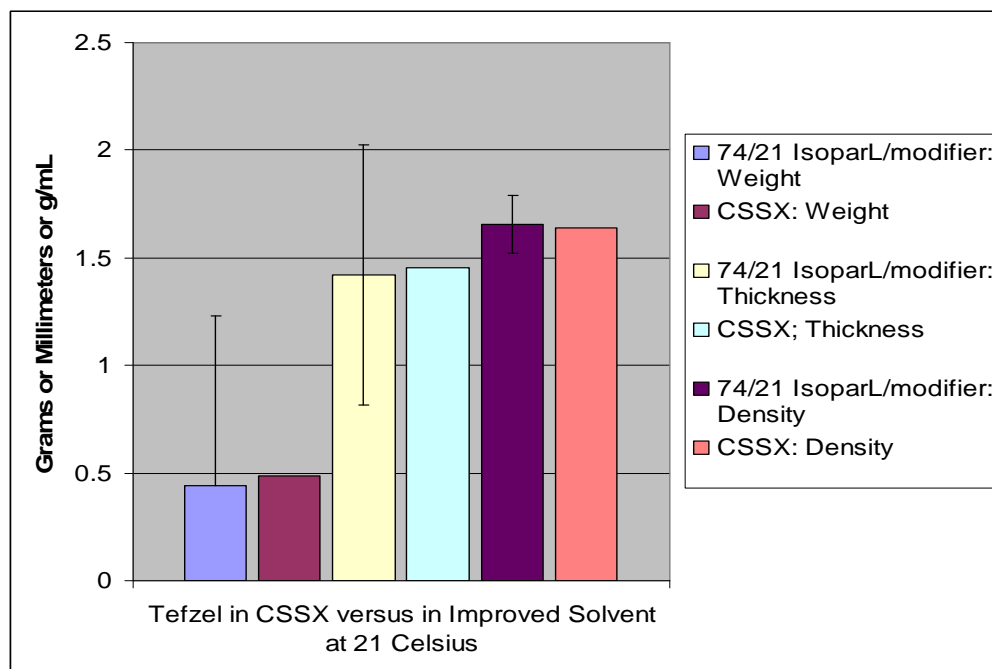


Fig. 1E. The weight, thickness, and density changes of Tefzel® in 74/21 Isopar® L / Modifier versus that in baseline CSSX. [The x-axis title for this plot needs to be bolded, consistent with the plot below.]

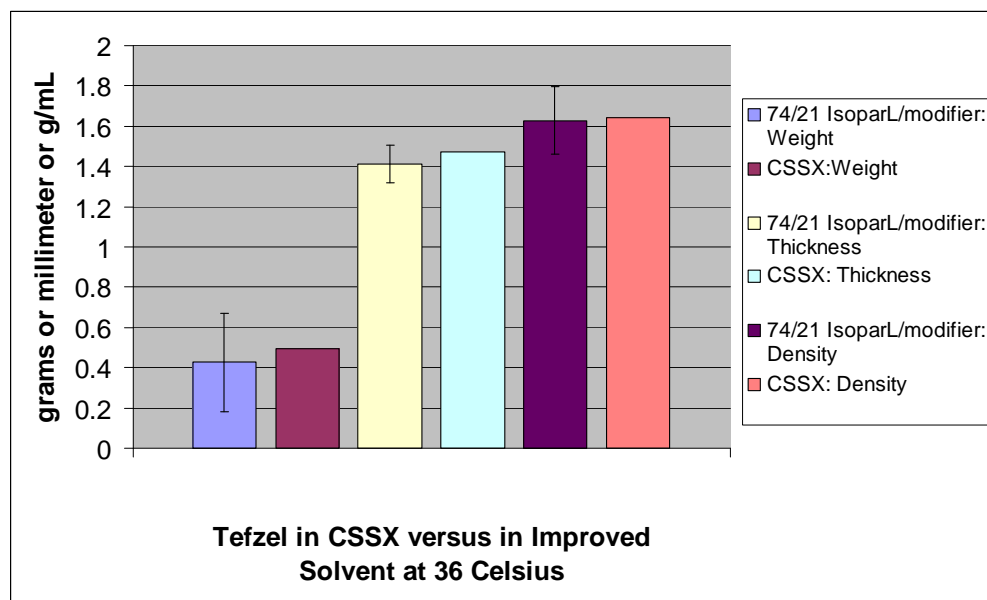


Fig. 2E. The weight, thickness, and density changes of Tefzel® in 74/21 Isopar® L / Modifier versus that in baseline CSSX.

5.0 References

¹ B. Moyer, J. F. Birdwell, L. H. Delmau, D. L. Schuh, E. L. Stoner, N. J. Williams, S. D. Fink, T. B. Peters, R. A. Pierce, R. A. Leonard, and M. W. Geeting, “Next Generation Cesium Solvent,” EM Technical Exchange Meeting, Atlanta, GA, Nov. 16-18, 2010.

² B. A. Moyer, P. V. Bonnesen, L. H. Delmau, F. V. Sloop, Jr., N. J. Williams, J. F. Birdwell, Jr., D. L. Lee, R.A. Leonard, S. D. Fink, T. B. Peters, and M. W. Geeting, “Development of the Next-Generation Caustic-Side Solvent Extraction (NG-CSSX) Process for Cesium Removal from High-Level Tank Waste”, WM2011 Conference, February 27–March 3, 2011 (Phoenix, AZ).

³ T. B. Peters, S. D. Fink, “Results of the First Extraction-Scrub-Strip Testing Using Improved Solvent Formulations”, SRNL-STI-2010-00586, Rev 0, September 2010.

⁴ F. F. Fondeur, T. B. Peters, and S. D. Fink, “Next Generation Solvent – Materials Compatibility with Polymer Components within Modular Caustic-Side Solvent Extraction Unit,” SRNL-STI-2011-0199, March 31, 2011.

⁵ D. D. Larsen and M. A. Pelicone, “MCU Task Requirements and Criteria Design Constraint Verification (U),” LWO-SPT-2007-00149, July 2007.